

## Why Purchase Tricare Ultimate Protect?

- ✓ BEST-IN-CLASS COMPREHENSIVE COVERAGE
- ✓ 100% PARTS & LABOUR
- ✓ COVERAGE TERMS UP TO 10 YEARS & UP TO 200,000 KILOMETRES
- ✓ CHOICE OF DEDUCTIBLES
- ✓ ROADSIDE ASSISTANCE, TOWING
- ✓ SUBSTITUTE TRANSPORTATION
- ✓ TRIP INTERRUPTION
- ✓ FAST & EFFICIENT CLAIMS PROCESS
- ✓ DIRECT CREDIT CARD PAYMENT BY TRICOR TO THE REPAIR FACILITY
- ✓ COVERAGE IN CANADA AND THE CONTINENTAL UNITED STATES
- ✓ EASILY TRANSFERABLE
- ✓ FINANCING AVAILABLE


# TRICARE ULTIMATE PROTECT



Protecting Canadians and their Vehicles since 1986

## ULTIMATE PROTECT PROTECTION AGAINST UNEXPECTED BREAKDOWNS

[www.tricorauto.com](http://www.tricorauto.com)

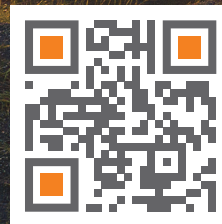

*This brochure is not a contract and the contents are limited by its size.  
Please read the full agreement for the specific terms, coverages, limitations,  
restrictions and exclusions that may apply to your coverage.  
For more information, contact your selling Dealer.*

*Tricare Ultimate Protect is fully insured by licensed  
Canadian insurance companies*

Form # TC-ULTBR



# TRICARE

## ULTIMATE PROTECT

# PROTECTION AGAINST UNEXPECTED BREAKDOWNS

### ENGINE

All internal lubricated parts  
Manifolds  
Expansion plugs  
Harmonic balancer  
Pulleys  
Engine mounts  
Oil pan  
Rotary engine  
Rotor housing  
Supercharger/turbocharger (factory installed): housing, internal parts, vanes  
Timing belt/chain and tensioner  
Timing chain cover  
Valve cover(s)  
Water pump  
Seals and gaskets within component group  
Metal cooler lines  
Hoses with metal/alloy pressure fittings attached  
Cases and housings are covered only if damaged by the failure of an internally lubricated part  
Engine block  
Cylinder heads

### TRANSMISSION

Automatic, Standard or Transfer Case: All internal lubricated parts within the transmission  
Mounts  
Torque converter  
Flywheel/flexplate  
Transmission and transfer case housing  
Dual clutch transmission  
Transmission cooler  
Front pump  
Oil pan  
Vacuum modulator  
External and internal control units  
Seals and gaskets  
Metal cooler lines  
Hoses with metal/alloy fittings attached  
Transmission Control Module

### FRONT, REAR OR ALL WHEEL DRIVE

All internal lubricated parts within the drive/transaxle assembly including:  
Axles and axle bearings  
Constant velocity joints  
Constant velocity boots  
Drive axle housing  
Drive shaft support  
Differential cover  
Hub bearings  
Front hub locking assemblies  
Drive shaft  
Universal joints  
Four wheel drive actuator  
Seals and gaskets

### AIR CONDITIONING

Accumulator  
Blower motor  
Compressor: clutch, internal parts and pulley assembly  
Condenser  
Evaporator  
Orifice tube  
Suction control devices  
Thermostatic expansion valve  
High/low compressor cut-off switch  
Pressure cycling switch  
Seals and gaskets  
A/C lines  
Idle pulley and bearings  
Refrigerant ONLY if needed in conjunction with the repair of a covered component.

### FUEL SYSTEM

Fuel pump  
Fuel distributor  
Injectors  
Lines (metal)  
Pressure regulator  
Rail  
Tank  
Fuel tank sending unit

Throttle body  
Idle speed or automatic idle speed assemblies  
Diesel: Accessory vacuum pump, injector pump  
Seals and gaskets

### BRAKES

Master cylinder  
Proportioning valve  
Vacuum assist booster  
Hydro boost  
Disc brake caliper  
Wheel cylinders  
Compensating valve  
Brake hydraulic lines and fittings  
Hydraulic control unit  
Seals and gaskets  
Electronic control processor  
Wheel speed sensors  
Hydraulic pump/motor assembly  
Pressure modulator valve/isolation dump valve  
Accumulator  
Seals and gaskets  
Electronic emergency brake  
Electronic brake booster

### COOLING SYSTEM

Cooling fan motor  
Blade assembly  
Clutch and motor  
Radiator  
Belt tensioner  
Heater core  
Thermostat  
Heater control valve  
Seals and gaskets  
Metal cooler lines  
Hoses with metal/alloy fittings attached

### ELECTRICAL

Alternator  
Back up light switch  
Horns

Ignition coil  
Oil pressure sending unit  
Sensors (engine management)  
Main wiring harness  
Ignition module  
Electronic Control Unit  
Powertrain Control Module  
Body Control Module  
Starter motor  
Solenoid and starter drive  
Washer pump motor  
Wiper motor (front and rear)  
Power mirror motor  
USB ports and wiring  
The following electrical switches when manually or mechanically operated:  
Brake light switch  
Defogger switch  
Headlight dimmer switch  
Headlight switch  
Ignition switch  
Mirror switch  
Turn signal switch  
Washer pump switch  
Window switches  
Wiper switch

### SUSPENSION

Ball joints  
Control arms  
Bearings  
Bushings  
Shafts  
Torsion bars  
Mounts and bushings  
Stabilizer bar  
Links and bushings  
Radius arm and bushings  
Height sensor  
Mode switch  
Spindles  
Wheel bearings  
Shocks & Struts  
Upper pivot bearing mounting assembly  
Wheel seals  
Seals and gaskets

### STEERING

All internal lubricated parts within the steering gear and power steering pump  
Power steering hoses and couplings  
Intermediate shaft and main shaft  
Steering gear and pump housing  
Pitman arm  
Idler arm  
Tie rod ends  
Drag link  
Tilt wheel mechanism  
Rack and pinion gear and housing  
Electronic steering systems  
Seals and gaskets

### HIGH-TECH COMPONENTS (FACTORY INSTALLED EQUIPMENT ONLY)

Navigation systems  
Backup cameras  
Bluetooth modules  
Lane departure systems  
Blind spot monitors  
Front and rear crash prevention: perimeter-warning system, sensors, radars, LIDAR  
Voice recognition system  
Audio components  
Antenna: GPS, audio  
Anti-theft system: switches, relays, sensors and siren  
Convertible top engagement switch and motor  
Cruise control System  
Power door locks actuators  
Headlamp door motors  
HVAC system  
Instrument cluster  
Electronic driver information display module/power supply, gauges, heads up display

Keyless entry system  
Air Ride System: Level control sensors, Limiter valves and compressor  
Power seat motor  
Seat memory switches  
Seat heaters and AC  
Seat massager  
Third row seat release switch  
Sunroof: motor, switches  
Seat switches  
Trunk lid release switch  
Trunk lid release activator and motor  
Power windows: motor, regulator  
Rear kick sensor  
LED/HID headlamps  
Sliding door motors  
Step rail motors  
Auto start/stop  
Push button start ignition  
Rear entertainment system and DVD player  
Steering wheel remote controls

Tricare Ultimate Coverage provides coverage for just about every failure. Unless the item is listed as NOT being covered: It is!

Some items are, of course excluded, such as routine maintenance items like:

Oil, Coolant, Fluids, Refrigerant (unless required in conjunction with a covered repair), Spark Plugs, Ignition wires, Filters

### ITEMS THAT NEED REPLACEMENT ON A REGULAR BASIS SUCH AS

Wiper blades	Brake discs and pads
Batteries	Clutch friction material
Lights and bulbs	Drums and shoes
Tires	Exhaust system

### APPEARANCE AND EXTERIOR ITEMS SUCH AS

Glass  
Ornaments  
Vinyl  
Paint  
Wheel covers

### INTERIOR ITEMS SUCH AS

Upholstery  
Leather vinyl  
Buttons  
Carpet  
Door and window handles

**Note:** Breakdowns caused by rust or corrosion are excluded from all coverages. This document summarizes the features of the TRICARE ULTIMATE PROTECT coverage. Please, refer to the actual consumer agreement for the specific term, conditions, limitations and exclusions that apply to your coverage.

